


# Technical Data Sheet

## Fresh TL98P Wall Vent

### Product

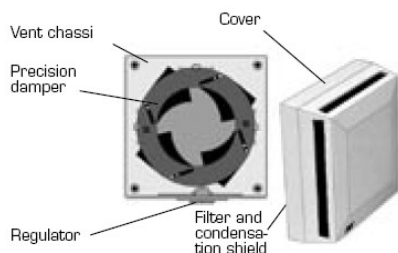

### INSTALLATION


- Place vent as high as possible at least 10cm below ceiling, preferably above radiator
- Check for services before drilling
- Use core drill with minimum dim  $\varnothing 102\text{mm}$  for TL98P &  $\varnothing 125\text{mm}$  for TL80dB
- Drill hole so pipe slopes slightly downwards
- If wall thickness is less than 300mm pipe can be cut to required length, if over additional pipes may be required
- Seal pipe both inside and outside with a suitable sealant agent
- Mechanically fix external grille into place
- Remove internal vent housing and fix with 4 screws
- Attached front cover and check vent is fully operational
- Wash filter 1-2 times per year.

### FEATURES & BENEFITS

- Square shaped wall vent for continuous draught free and filtered airflow
- Supplied with standard dust and insect filter
- Front cover insulated from condensation and sound penetration
- Unique air distribution pattern
- Precision damper is adjustable by a regulator with a 1-10 scale located underneath vent.
- Easy to clean and install
- Also available in sound reduction model (TL80dB)
- Telescopic pipe for flexibility
- Wide range of storm and Allergy filter accessories available

### Product Details

<b>Free Area</b>	6000mm <sup>2</sup>
<b>Wall opening</b>	TL98P - 102mm diameter TL80dB - 124mm diameter
<b>Maximum thickness</b>	TL98 - 350mm TL80dB - 400mm
<b>Size</b>	External grille - 150 x 150mm Internal grille - 150x150x60mm

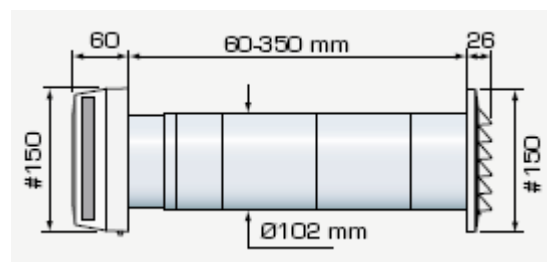

<b>Colour</b>	White RAL9010
<b>Code</b>	TL98P TL80dB (acoustic)

